




REAC/TS

Radiation Emergency
Assistance Center/Training Site

Personnel Monitoring

- Before stepping from contaminated area, survey soles of feet.
- Have person stand in step off area.
- Instruct the person to stand straight, feet spread slightly, arms extended with palms up and fingers straight out.
- Survey **1** face and **2** hands.
- Survey from the **3** top of the head, covering the torso, **4/2** arms/hands, and **5** legs. Good survey technique is essential. Use a slow, methodical technique to monitor 100% of the body surface area.
- Have the person turn around, and repeat the survey on the back of the body.

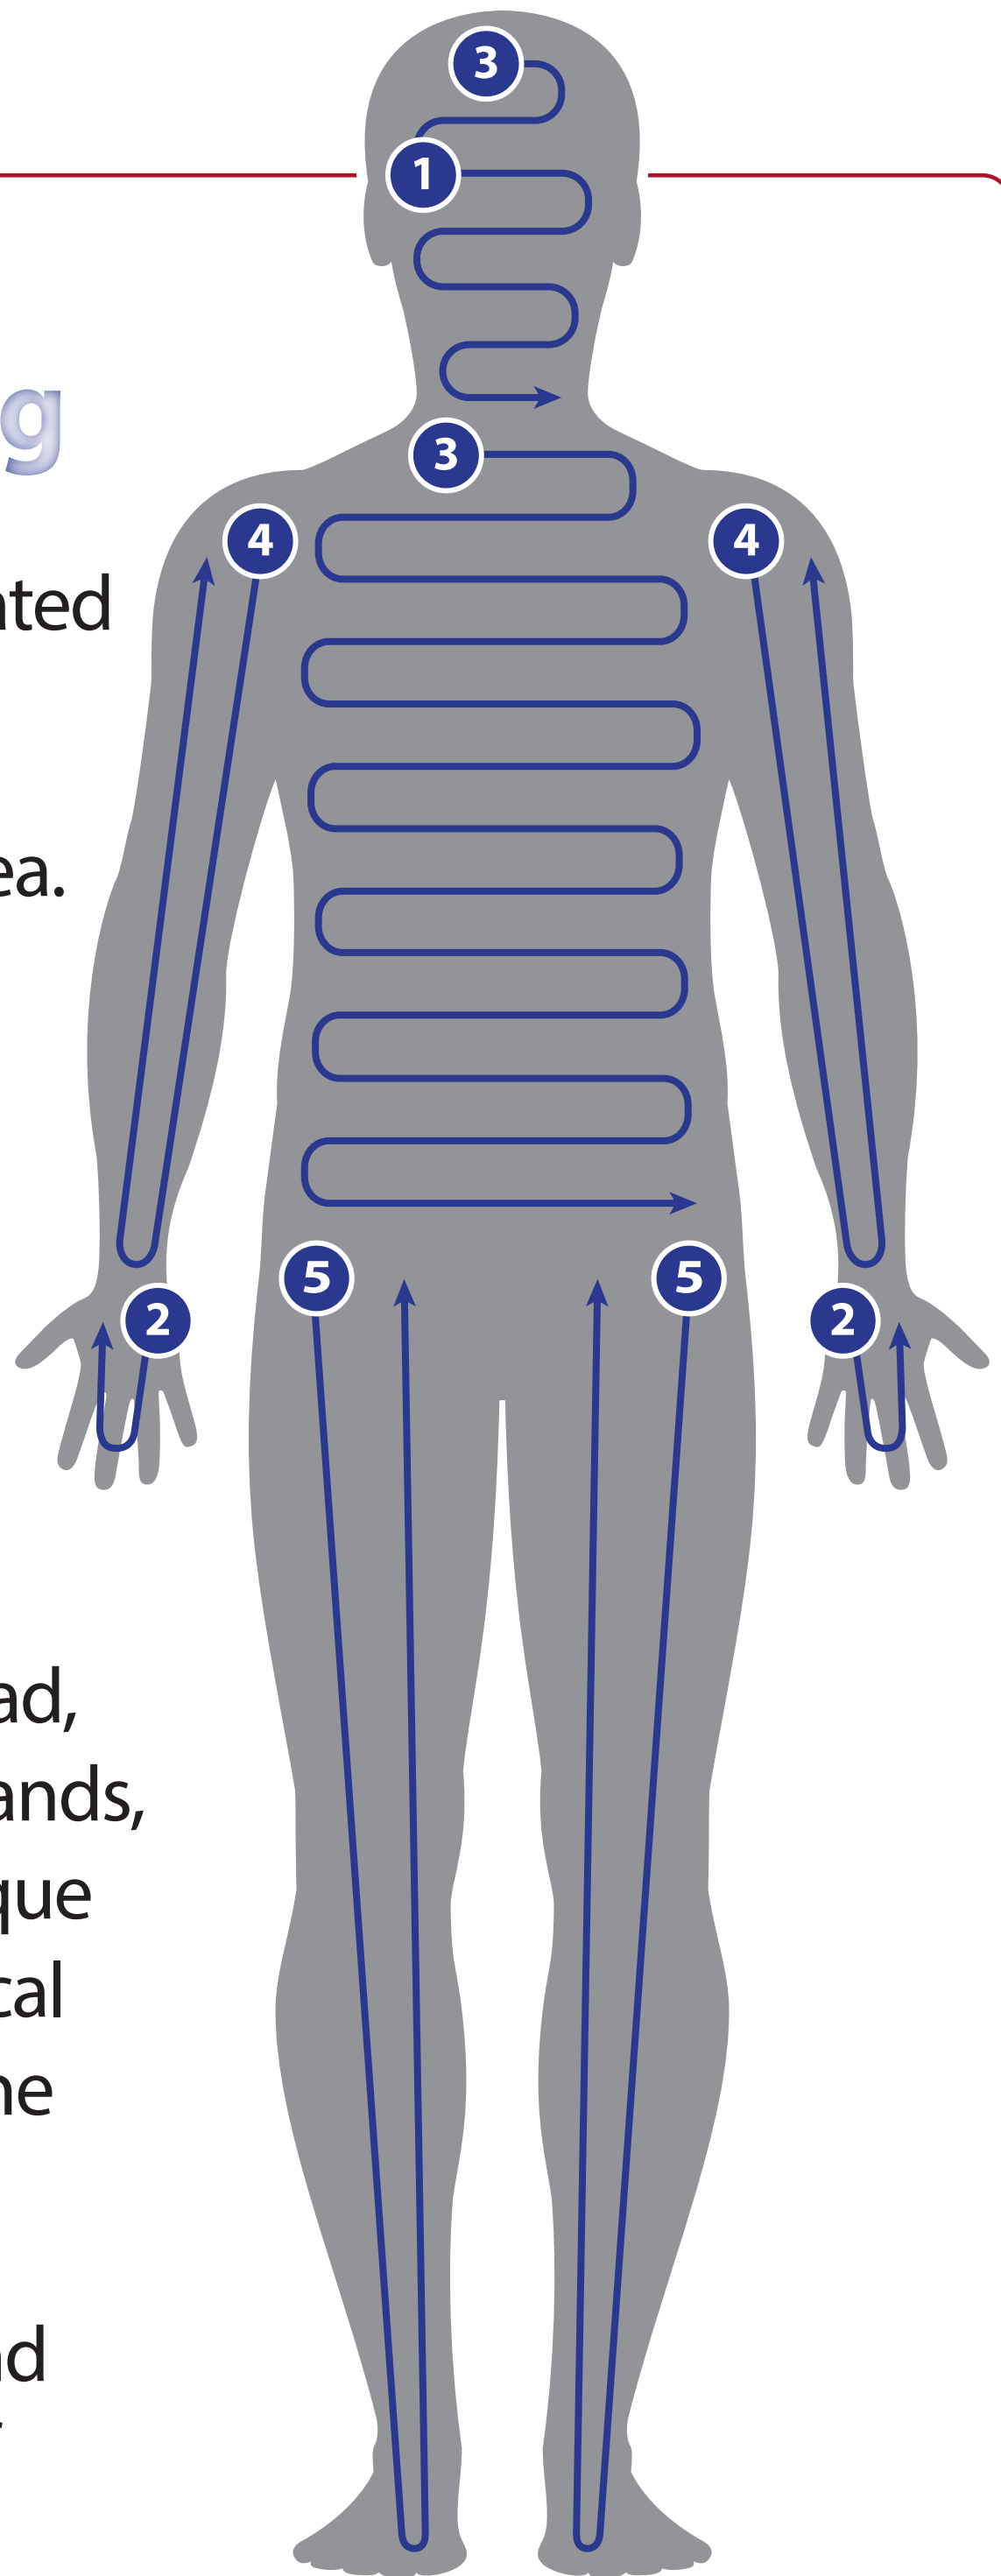

OAK RIDGE INSTITUTE
FOR SCIENCE AND EDUCATION
Shaping the Future of Science