




# REAC/TS

Radiation Emergency  
Assistance Center/Training Site

## Personnel Monitoring

- Before stepping from contaminated area, survey soles of feet.
- Have person stand in step off area.
- Instruct the person to stand straight, feet spread slightly, arms extended with palms up and fingers straight out.
- Survey **1** face and **2** hands.
- Survey from the **3** top of the head, covering the torso, **4**/**2** arms/hands, and **5** legs. Good survey technique is essential. Use a slow, methodical technique to monitor 100% of the body surface area.
- Have the person turn around, and repeat the survey on the back of the body.

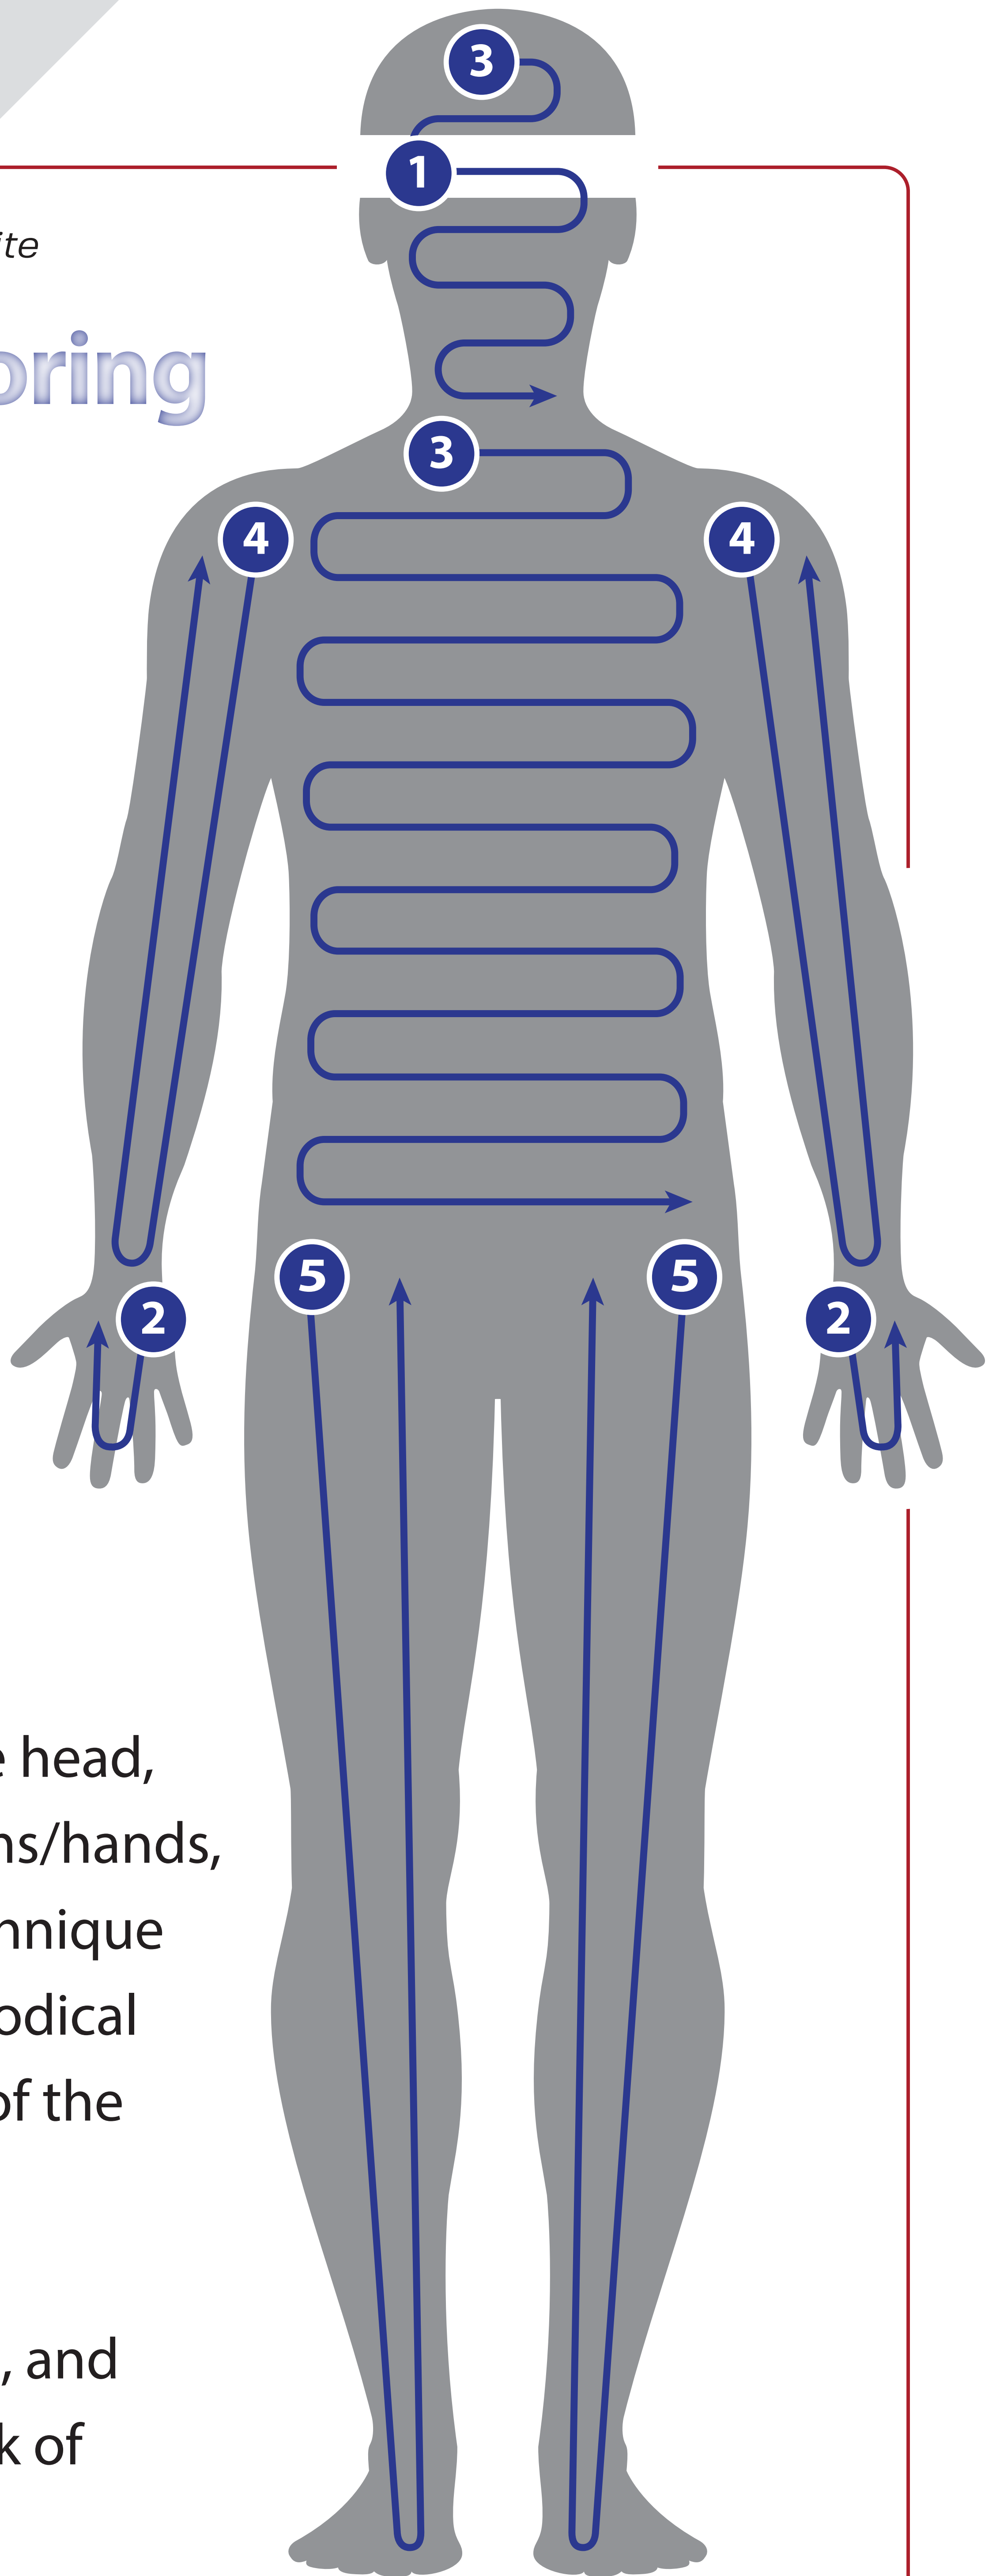

OAK RIDGE INSTITUTE  
FOR SCIENCE AND EDUCATION  
*Shaping the Future of Science*