




# REAC/TS

Radiation Emergency  
Assistance Center/Training Site

## Removing Protective Clothing (Doffing)

The outside of all protective clothing should be considered contaminated.

- 1 Remove outer gloves, turning them inside out as they are pulled off.
- 2 Give dosimeter to the control line person.
- 3 Remove all tape at sleeves, trouser cuffs, and zipper (as applicable).
- 4 Remove head cover and face shield/goggles, pulling them back and away from the face.
- 5
  - Coveralls: Unzip and remove by folding outward/downward, leaving shoe covers in place
  - Protective Gown: Pull away from the neck/shoulders and remove by turning inside out
  - Only the inside of protective coveralls or gowns should be touched.
- 6 Remove mask by grasping earpieces or ties. Do not touch the front of the mask.
- 7
  - Remove shoe cover from one foot and survey bottom of shoe. If not contaminated, place foot across control line onto step-off area.
  - Remove other shoe cover and survey bottom of shoe. If not contaminated, stand in step-off area, keeping hands inside the control line.
- 8 While keeping hands inside the controlled area, remove inner gloves and place them in the contaminated trash receptacle.
- 9 Perform a head-to-toe radiological survey before leaving the step-off area.

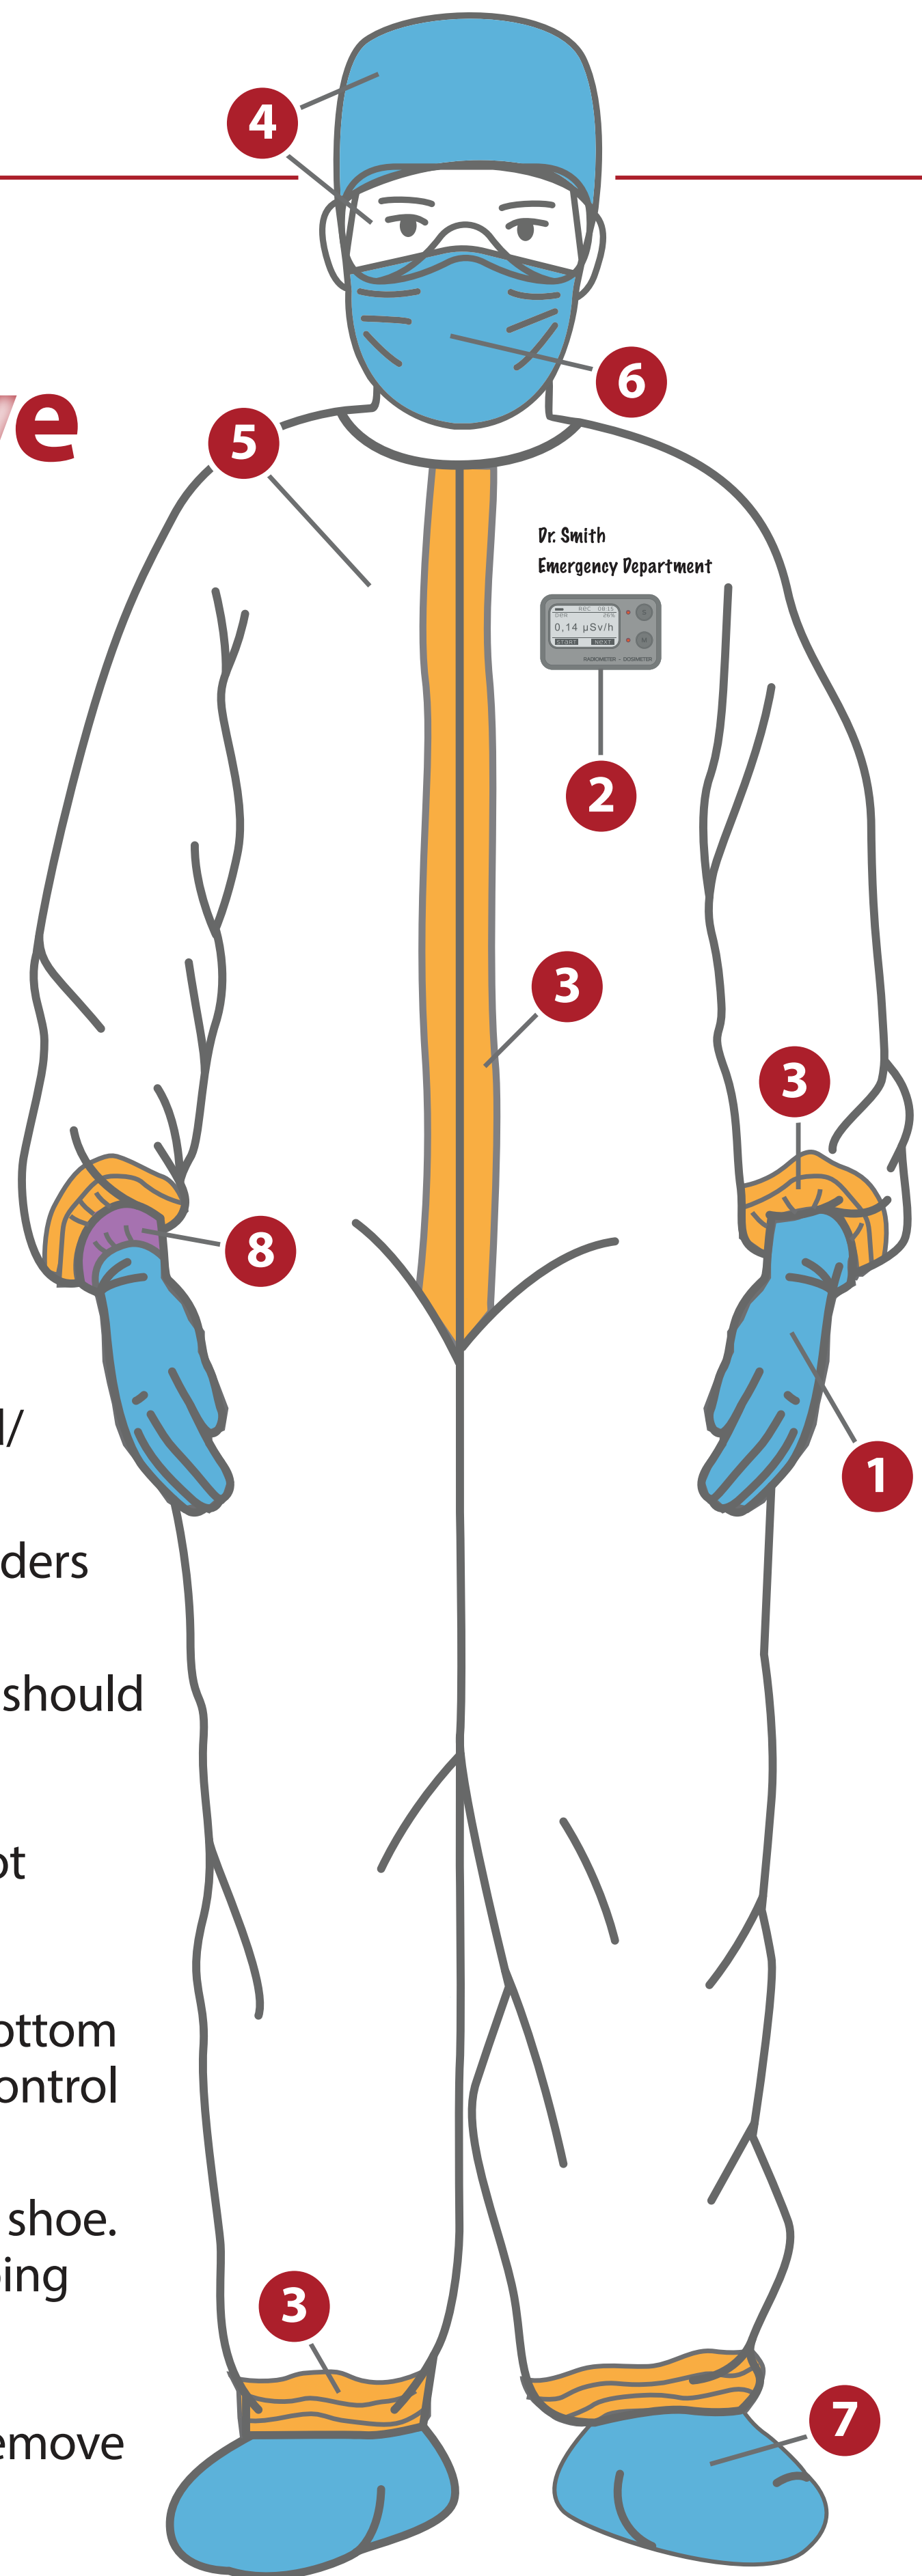

OAK RIDGE INSTITUTE  
FOR SCIENCE AND EDUCATION  
*Shaping the Future of Science*